


SILKWOOD

The Superior Choice

+27 {012} 668-1069

@silkwoodafrica

@silkwoodafrica

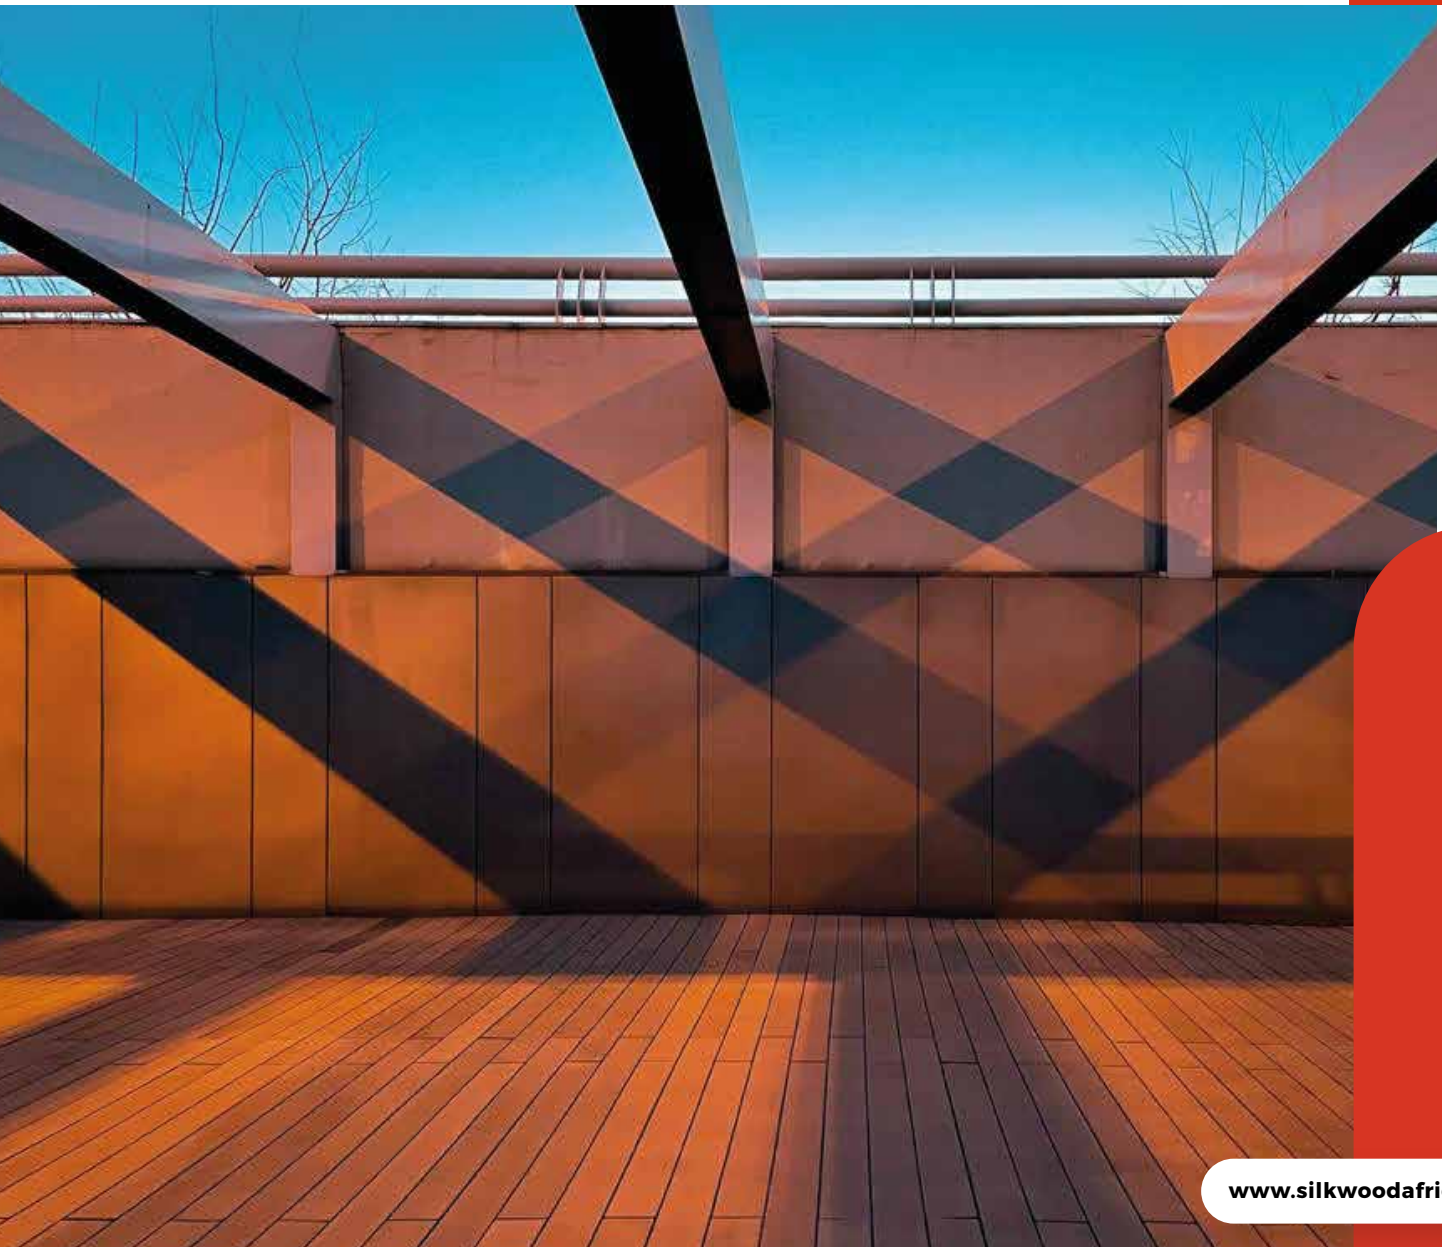

www.silkwoodafrica.com

Correct Application Directions For Silkwood M7 Use

Typical Applications


- Timber Decking
- Outdoor Patio Furniture
- Side Skirtings





M7 APPLICATION CRITERIA

- **First coat must be mixed with 50% Mineral Turps this can be any brand of mineral turpentine & 50% Silkwood M7**, this is imperative stirred very well before use then applied to your application this will ensure the wood gets the proper nutrients and nourishment it deserves, this will enhance the wood and give it optimum longevity.
- Second & Third coat can be applied straight from the M7 tin and applied directly to the application. We recommend X3 coats to your application to get optimum results.
- **We recommend maintenance of X 2 coats every 8 months for the first 3 years.**
- We Suggest 1 under coat, and 2 topcoats for decking and X3 coats to any other application, please apply Silkwood to the side of the timber edges, as well for if you are applying to decking.
- Adequate drying should take place between coats, you should allow 24-28 hours drying per coat.
Silkwood should be applied to the application in a well-ventilated area, to allow the wood to breathe properly and dry in adequate timing.
- The surface to be dry, clean and free of all contaminants, e.g. previous paints or varnishes.
- The surface should be well sanded, down to the bare grain to get excellent results, after sanded please take some steel wool and lightly rub away any dust particles before applying Silkwood.
- The product can be spray or brush applied.

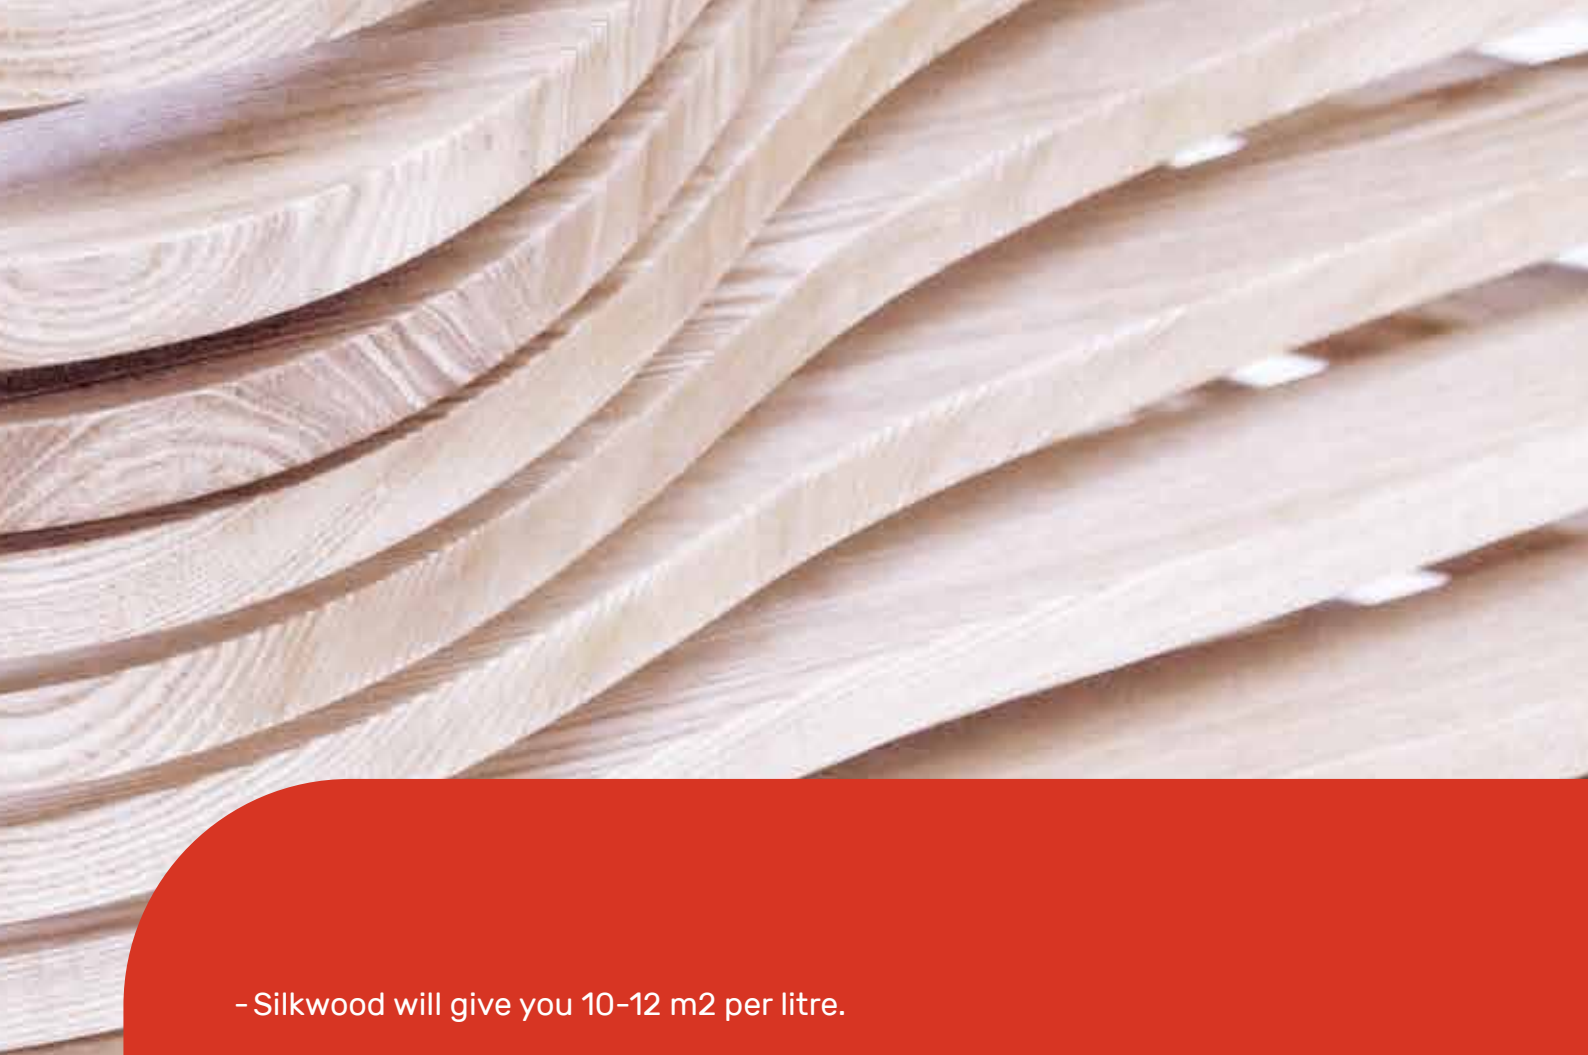

- Silkwood will give you 10-12 m² per litre.
- To get the best results using Silkwood's product range when applying it should be done so in a sparingly motion and not just blotched on and painted.
- Do not expose the product to naked flames etc, as it is flammable.

Specific Characteristics

Physical Appearance: Pale Yellow Liquid

S.G: 0.86

Solid (Mass): 44.0

Spread Rate: Approx 10-12 sq mt per litre, depending upon density and porosity of the wood.

*** Under no circumstances should M2 product range be mixed with any mineral turps, it should only be used for the M7 colour range including clear, do not add any stains or colourants to Silkwood product range, as it will not work we have specific colours that have added pigments to give you the colour you want.**

